


## Data sheet

# Electric expansion valve

## Type AKV 10P, AKV 10PS

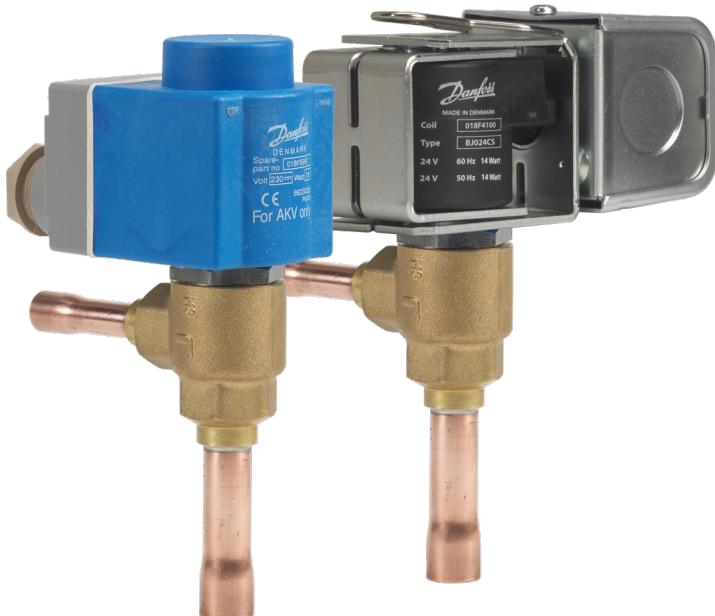

AKV 10P and AKV10PS are electric operated expansion valves designed for refrigerating plants.

The AKV 10P and AKV 10PS valves are normally controlled by a controller from Danfoss range of ADAP-KOOL® controllers, that ensures a precise liquid injection into evaporators.

The AKV 10P and AKV 10PS valves are supplied as a part program, as follows:

- Separate valve
- Separate coil with terminal box, DIN plug or cable
- Spare parts in the form upper part, orifice and filter

The orifice assembly is replaceable.  
The AKV 10P and AKV 10PS valves cover a wide capacity range.

### Features

#### Precise control of liquid injection

- Optimum utilization of the evaporator
- Increased energy efficiency and COP
- Improved overall system performance
- Enables energy saving minimum stable superheat and adaptive defrost algorithms due to turbulent flow
- Provides excellent distribution and oil return
- Repetitive operation of the valve at all conditions

#### Superior valve technology

- Soft pulse operation makes possible to have a low noise valve that guarantees precise flow control and increased energy efficiency of the system

#### Fully Serviceable valve

- Fast troubleshooting during system diagnostics
- Replaceable filter and orifice assembly
- Special Service coil available for installation and servicing

#### Fast opening/closing within sec.

- Quick reaction to the operating condition.
- Minimizes the risk of liquid refrigerant flowing into the compressor at shut down and low pressure cut out at start up
- Normally closed Solenoid tight shut-off valve
- Prevents migration of the refrigerant during stand-still
- Reduced complexity by reducing number of components in the system

#### Supports variety of refrigerants with wider regulation range

- Wide application scope

#### Compact, lightweight design

- Flexible and easy integration in any system

#### Wider selection range

- Wider range of coils AC/DC coils with various cable length

#### Valve construction

- Internal and external corrosion resistant

#### Protecting the environment and climate

- Manufactured according to ISO/TS16949
- Second – to – none quality and reliability

## Data sheet | Electric expansion valve, type AKV 10P, AKV 10PS

### Approvals (valves)

Pressure Equipment Directive (PED) 2014/68/EU



### Technical data

*Refrigerant*

R744, R22, R23, R134A, R404A, R407A, R407C, R407F, R410A, R422B, R422D, R448A, R449A, R449B, R450A, R452A, R507, R513A.  
For other refrigerants, please contact Danfoss.

#### *Direct operated Valve*

<b>Valve type</b>	AKV 10P0 to AKV 10P7
<b>Working principle</b>	PWM (Pulse-width modulation)
<b>Recommended period of cycle time</b>	6 Seconds
<b>Regulation range (Capacity range)</b>	10 – 100%
<b>Connection type</b>	Solder
<b>Evaporating temperature</b>	-60 – 60 °C / -76 – 140 °F
<b>Ambient temperature</b>	-50 – 50 °C / -58 – 122 °F
<b>MOPD, AKV 10P0 to AKV 10P6</b>	35 bar / 508 psig
<b>MOPD, AKV 10P7</b>	18 bar / 261 psi
<b>Min. OPD, AKV 10P0 to AKV 10P7</b>	0 bar / 0 psi
<b>Filter, replaceable</b>	Internal 100 µm
<b>Max. working pressure</b>	90 barg / 1305 psig
<b>MAP (Max. Abnormal Pressure)</b>	1305 psig
<b>COT (Continuous Operation Temperature)</b>	140 °F

#### *Servo operated Valve*


<b>Valve type</b>	AKV 10PS4 to AKV 10PS7
<b>Working principle</b>	PWM (Pulse-width modulation)
<b>Recommended period of cycle time</b>	6 Seconds
<b>Regulation range (Capacity range)</b>	10 – 100%
<b>Connection type</b>	Solder
<b>Evaporating temperature</b>	-60 – 60 °C / -76 – 140 °F
<b>Ambient temperature</b>	-50 – 50 °C / -58 – 122 °F
<b>MOPD</b>	35 bar / 508 psig
<b>Min. OPD, AKV 10PS4 to AKV 10PS7</b>	0.1 bar / 1.45 psi
<b>Filter, replaceable</b>	Internal 53 µm
<b>Max. working pressure</b>	90 barg / 1305 psig
<b>MAP (Max. Abnormal Pressure)</b>	1305 psig
<b>COT (Continuous Operation Temperature)</b>	140 °F
<b>Recommended Danfoss Filter</b>	ELIMINATOR® Hermetic filter drier, type DML / DMSC




**Note:** It is recommended to selected Servo operated AKV 10PS valves for those application where higher MOPD (with low coil power) and high dampening is required.

### Valve identification

**Direct operated valve  
AKV 10P0 - AKV 10P7**

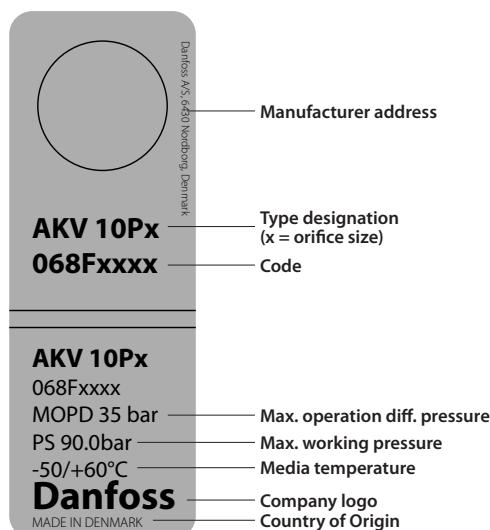

**Servo operated valve  
AKV 10PS4 - AKV 10PS7**

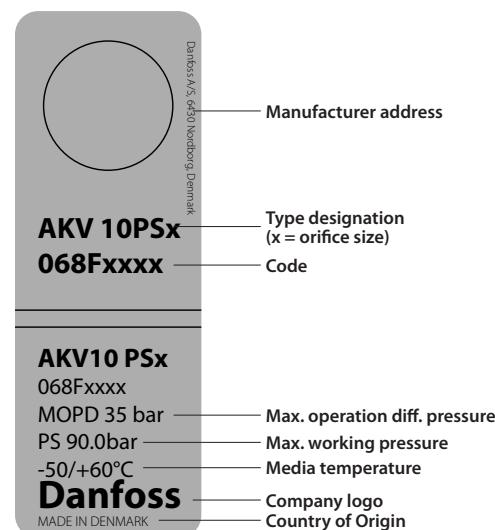

## Data sheet | Electric expansion valve, type AKV 10P, AKV 10PS

### Capacity and ordering

#### AKV 10P - Rated capacity

Valve type /orifice no.	R744 <sup>2)</sup>				R407A <sup>1)</sup>		R404A/R507 <sup>1)</sup>		$k_v$ value	$C_v$ value <sup>3)</sup>	Connection size Solder ODF/ODF		Code no. Single pack	Code no. Industrial pack 16 pcs. pr. pack	
	Refrig.	Freezing	Refrig.	Freezing							[m <sup>3</sup> /h]	[gpm]	[in]	[mm]	
	[kW]	[kW]	[TR]	[TR]	[kW]	[TR]	[kW]	[TR]							
AKV 10P0	0.44	0.69	0.13	0.20	0.34	0.10	0.21	0.06	0.003	0.0035	$\frac{3}{8} \times \frac{1}{2}$	—	068F5210	068F5230	
AKV 10P0	0.44	0.69	0.13	0.20	0.34	0.10	0.21	0.06	0.003	0.0035	—	10 × 12	068F5200	068F5220	
AKV 10P1	1.17	1.84	0.33	0.53	0.90	0.26	0.8	0.23	0.09	0.104	$\frac{3}{8} \times \frac{1}{2}$	—	068F5211	068F5231	
AKV 10P1	1.17	1.84	0.33	0.53	0.90	0.26	0.8	0.23	0.09	0.104	—	10 × 12	068F5201	068F5221	
AKV 10P2	2.06	3.25	0.59	0.93	1.59	0.45	1.3	0.37	0.016	0.021	$\frac{3}{8} \times \frac{1}{2}$	—	068F5212	068F5232	
AKV 10P2	2.06	3.25	0.59	0.93	1.59	0.45	1.3	0.37	0.016	0.021	—	10 × 12	068F5202	068F5222	
AKV 10P3	3.14	4.97	0.90	1.41	2.43	0.69	2.0	0.57	0.024	0.028	$\frac{3}{8} \times \frac{1}{2}$	—	068F5213	068F5233	
AKV 10P3	3.14	4.97	0.90	1.41	2.43	0.69	2.0	0.67	0.024	0.028	—	10 × 12	068F5203	068F5223	
AKV 10P4	6.10	9.64	1.74	2.75	4.71	1.34	3.1	0.88	0.046	0.053	$\frac{3}{8} \times \frac{1}{2}$	—	068F5214	068F5234	
AKV 10P4	6.10	9.64	1.74	2.75	4.71	1.34	3.1	0.88	0.046	0.053	—	10 × 12	068F5204	068F5224	
AKV 10P5	8.49	13.4	2.42	3.82	6.55	1.87	4.9	1.39	0.064	0.074	$\frac{3}{8} \times \frac{1}{2}$	—	068F5215	068F5235	
AKV 10P5	8.49	13.4	2.42	3.82	6.55	1.87	4.9	1.39	0.064	0.074	—	10 × 12	068F5205	068F5225	
AKV 10P6	15.1	23.9	4.31	6.81	11.7	3.32	7.8	2.22	0.114	0.132	$\frac{3}{8} \times \frac{1}{2}$	—	068F5216	068F5236	
AKV 10P6	15.1	23.9	4.31	6.81	11.7	3.32	7.8	2.22	0.114	0.132	—	10 × 12	068F5206	068F5226	
AKV 10P7	24.6	39.3	7.00	11.1	18.9	5.39	12.5	3.55	0.185	0.214	$\frac{1}{2} \times \frac{5}{8}$	—	068F5217	—	
AKV 10P7	24.6	39.3	7.00	11.1	18.9	5.39	12.5	3.55	0.185	0.214	—	12 × 16	068F5207	—	

<sup>1)</sup> Rated capacities are based on:

Condensing temperature  $t_c = 38^\circ\text{C}/100^\circ\text{F}$

Liquid temperature  $t_l = 37^\circ\text{C}/98^\circ\text{F}$

Evaporating temperature  $t_e = 4^\circ\text{C}/39^\circ\text{F}$

<sup>2)</sup> Rated capacities are based on:

Condensing temperature  $t_c = 0^\circ\text{C}/32^\circ\text{F}$

Evaporating temperature Refrig.  $t_e = -10^\circ\text{C}/14^\circ\text{F}$

Evaporating temperature Freezing.  $t_e = -30^\circ\text{C}/-22^\circ\text{F}$

Subcooling =  $1^\circ\text{C}/1.8^\circ\text{F}$

<sup>3)</sup>  $C_v$  value is calculated from  $K_v$  value in above table

#### AKV 10PS- Rated capacity

Valve type /orifice no.	R744 <sup>2)</sup>				R407A <sup>1)</sup>		R404A/R507 <sup>1)</sup>		$k_v$ value	$C_v$ value <sup>3)</sup>	Connection size Solder ODF/ODF		Code no. Single pack	Code no. Industrial pack 16 pcs. pr. pack	
	Refrig.	Freezing	Refrig.	Freezing							[m <sup>3</sup> /h]	[gpm]	[in]	[mm]	
	[kW]	[kW]	[TR]	[TR]	[kW]	[TR]	[kW]	[TR]							
AKV 10PS4	6.10	9.64	1.74	2.75	4.71	1.34	3.1	0.88	0.046	0.053	$\frac{3}{8} \times \frac{1}{2}$	—	068F4044	068F5184	
AKV 10PS4	6.10	9.64	1.74	2.75	4.71	1.34	3.1	0.88	0.046	0.053	—	10 × 12	068F4034	068F5174	
AKV 10PS5	8.49	13.4	2.42	3.82	6.55	1.87	4.9	1.39	0.064	0.074	$\frac{3}{8} \times \frac{1}{2}$	—	068F4045	068F5185	
AKV 10PS5	8.49	13.4	2.42	3.82	6.55	1.87	4.9	1.39	0.064	0.074	—	10 × 12	068F4035	068F5175	
AKV 10PS6	15.1	23.9	4.31	6.81	11.7	3.32	7.8	2.22	0.114	0.132	$\frac{3}{8} \times \frac{1}{2}$	—	068F4046	068F5186	
AKV 10PS6	15.1	23.9	4.31	6.81	11.7	3.32	7.8	2.22	0.114	0.132	—	10 × 12	068F4036	068F5176	
AKV 10PS7	24.6	39.3	7.00	11.1	18.9	5.39	12.5	3.55	0.185	0.214	$\frac{1}{2} \times \frac{5}{8}$	—	068F4047	—	
AKV 10PS7	24.6	39.3	7.00	11.1	18.9	5.39	12.5	3.55	0.185	0.214	—	10 × 16	068F4037	—	

<sup>1)</sup> Rated capacities are based on:

Condensing temperature  $t_c = 38^\circ\text{C}/100^\circ\text{F}$

Liquid temperature  $t_l = 37^\circ\text{C}/98^\circ\text{F}$

Evaporating temperature  $t_e = 4^\circ\text{C}/39^\circ\text{F}$

<sup>2)</sup> Rated capacities are based on:

Condensing temperature  $t_c = 0^\circ\text{C}/32^\circ\text{F}$

Evaporating temperature Refrig.  $t_e = -10^\circ\text{C}/14^\circ\text{F}$

Evaporating temperature Freezing.  $t_e = -30^\circ\text{C}/-22^\circ\text{F}$

Subcooling =  $1^\circ\text{C}/1.8^\circ\text{F}$

<sup>3)</sup>  $C_v$  value is calculated from  $K_v$  value in above table

### Coolselector®2



### Valve sizing using calculation software

It is strongly recommended to use Coolselector®2 to find the correct valve for your application. The software can be downloaded from the Danfoss website. When using the calculation software it is recommended to choose a valve that is between 50% and 75% loaded at the nominal capacity. In addition, the liquid velocity in the line leading to the valve should not exceed 1m/s (3ft/s).

You can download it from <http://coolselector.danfoss.com>

## Data sheet | Electric expansion valve, type AKV 10P, AKV 10PS

### Standard coil for AKV 10P/ AKV 10PS



Solenoid coil with terminal box



Solenoid coil with DIN spade and protection cap



Solenoid coil with cable



Solenoid coil with DIN spade

**Approvals (coils)** Low Voltage Directive (LVD) 2014/35/EU



### Technical data

**Design**  
In accordance with IEC 60335

**Insulation of coil wire**  
Class H according to IEC 85

**Power supply**  
Alternating current (AC)

**Connection**  
Terminal box, DIN spade or cable

**Permissible voltage variation**  
Alternating current (AC):  
50 Hz and 60 Hz: -10% – 15%  
50/60 Hz: ± 10%


**Enclosure, IEC 60529**  
IP20, IP65 or IP67

**Ambient temperature**  
-40 °C – 50 °C / -40 °F – 122 °F

### Ordering coils

Coil type	MOPD (Max. Operation Pressure Differential)					
	Voltage	Frequency	Power consumption	Connection	Multi pack Code no.	Industrial pack Code no.
	[V AC]	[Hz]	[W]			Code no.
BE230CS	230	50	17	terminal box	018F6732	-
BE230CS	230	50	17	DIN plugs	018F6193	-
BF230CS	230	50	17	1 m cable	018F6282	018F8232
BF230CS	230	50	17	3 m cable	-	018F8290
BF230CS	230	50	17	8 m cable	018F4961	018F8291
BE240CS	240	60	15	terminal box	018F6713	-
BE240CS	240	60	15	terminal box	018F6814	-
BE240CS	240	60	15	1 m cable	018F6264	-
BG110BS	110	60	15	terminal box	018F6813	-

### Accessories (coil)

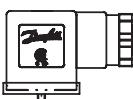

Plug for DIN spade connection

Type	Voltage	Frequency	Quantity	Code no. Multi pack
	[V]	[Hz]	[Pcs]	
DIN plug	Max. 250	50 / 60	100	042N0156

Single pack = 1 product in a box with installation guide

Multi pack = box with x pieces single pack (can be split)

Industrial pack = x pieces in one box (cannot be split)

### Coil identification

Example:



## Data sheet | Electric expansion valve, type AKV 10P, AKV 10PS

### UL coil for AKV 10P / AKV 10PS



Junction box NEMA 2



Conduit boss NEMA 4

### Approvals (coils)



### Technical data

**Design**  
In accordance with UL 429

**Insulation of coil wire**  
Class H according to IEC 85

**Power supply**  
Alternating current (AC)

**Connection**  
Junction box or Conduit boss

**Permissible voltage variation**  
Alternating current (AC):  
50 Hz and 60 Hz: -10% – 15%  
50/60 Hz: ± 10%

**Enclosure, IEC 60529**  
Junction box NEMA 2 ~ IP 12–32  
Conduit boss NEMA 4 ~ IP 54

**Ambient temperature**  
-40 °C – 50 °C / -40 °F – 122 °F

### Ordering BJ and BX Coils

Coil type	Wire length		Voltage	Frequency	Power consumption	Multi pack Code no.
	[in]	[cm]				

#### Junction box NEMA 2 for AKV 10P / AKV 10PS


BJ024CS	-	-	24	50 / 60	14	018F4100
BJ120CS	-	-	110	50	16	018F4110
BJ120CS	-	-	120	60	15	
BJ240CS	-	-	208 – 240	60	14	
BJ240CS	-	-	230	50	17	018F4120

#### Conduit boss NEMA 4 for AKV 10P / AKV 10PS

BX024CS	18	46	24	50 / 60	14	018F4102
BX024CS	71	180	24	50 / 60	14	018F4103
BX024CS	98	250	24	50 / 60	14	018F4104
BX120CS	18	46	110	50	16	018F4112
BX120CS	18	46	120	60	15	
BX120CS	36	91	110	50	16	018F4113
BX120CS	36	91	120	60	15	
BX120CS	71	180	110	50	16	018F4114
BX120CS	71	180	120	60	15	
BX120CS	98	250	110	50	16	018F4115
BX120CS	98	250	120	60	15	
BX240CS	18	46	208 – 240	60	14	018F4122
BX240CS	98	250	230	50	17	
BX240CS	18	46	208 – 240	60	14	018F4123
BX240CS	98	250	230	50	17	

### Coil Identification

Example:

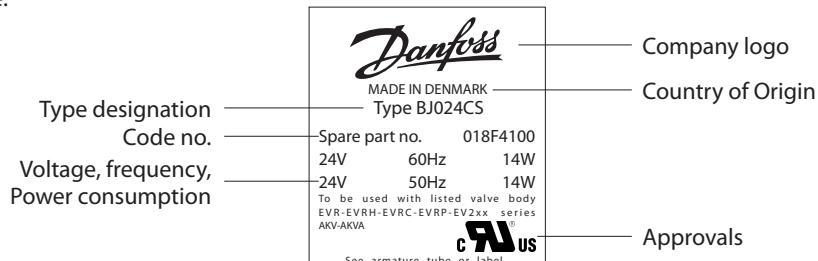

**Ordering spareparts**

For Direct operated AKV 10P

AKV 10P0 – AKV 10P3 Orifice kit 1	AKV 10P4 – AKV 10P7 Orifice kit 2	AKV 10P0– AKV 10P7 Armature kit 3	AKV 10P0 - AKV 10P7 Filter kit 4
Code no. 068F5151	Code no. 068F5152	Code no. 068F5153	Code no. 068F5154

For servo operated AKV 10PS


AKV 10PS4 - AKV 10PS7 Orifice kit 5	AKV 10PS4 - AKV 10PS7 Filter Kit 6	AKV 10PS4 - AKV 10PS7 Armature kit 7
Code no. 068F5155	Code no. 068F5156	Code no. 068F5161

**Accessories**

Product	Description	Code no.
Solenoid valve Tester	Permanent magnet for AKV 10P and AKV 10PS (for installation and testing purpose)	018F0091



### Typical Application

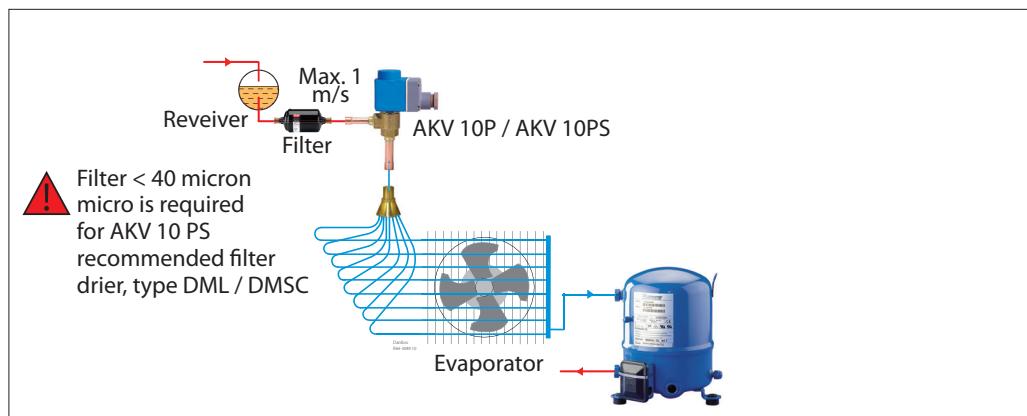

### Design and function


#### Name

1. Inlet (connection)
2. Outlet (connection)
3. Copper gasket
4. Amature
5. Protection filter  
100 micron (AKV 10P) and  
53 micron (AKV 10PS)
6. Piston
7. Orifice (AKV 10P)
8. Orifice (AKV 10PS)

#### Material

1. Copper
2. Copper
3. Cu/Tn
4. Stainless steel
5. Nylon/stainless steel
6. Brass
7. Stainless steel
8. Stainless steel


AKV 10P0 – AKV 10P7

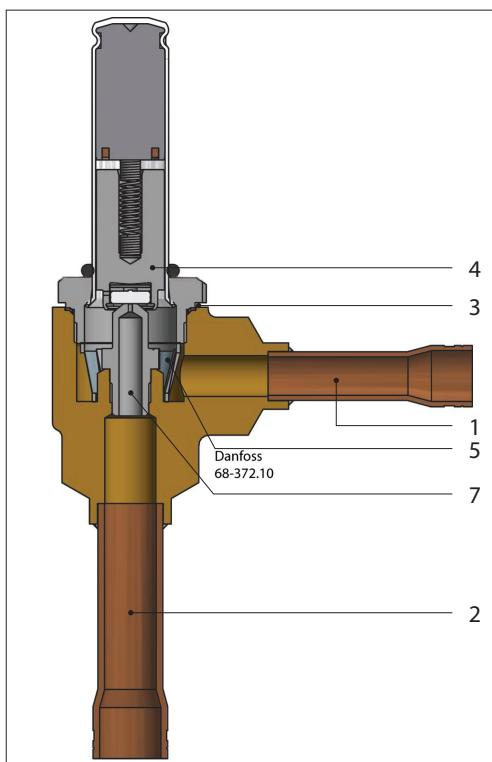

The valve capacity is regulated by means of pulse-width modulation. Within a period of six seconds a voltage signal from the controller will be transmitted to and removed from the valve coil. This makes the valve open and close for the flow of refrigerant.

The relation between this opening and closing time indicates the actual capacity. If there is an intense need for refrigeration, the valve will remain open for almost all six seconds of the period. If the required amount of refrigeration is modest, the valve will only stay open during a fraction of the period.

AKV 10PS4 – AKV 10PS7

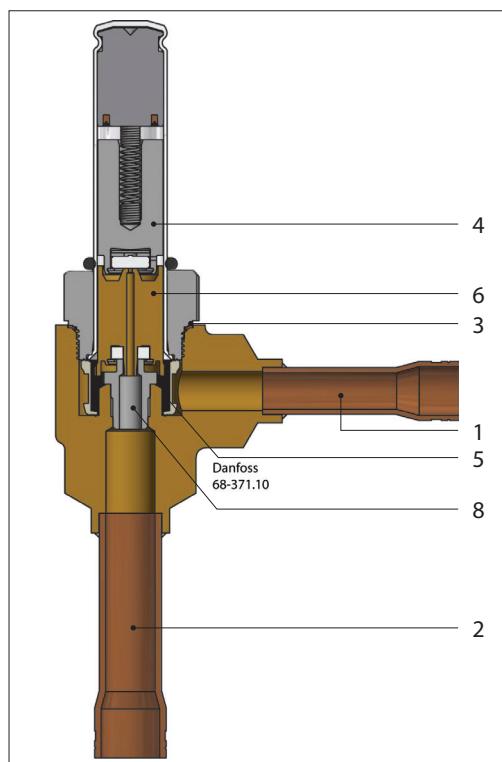


The amount of refrigeration needed is determined by the controller. When no refrigeration is required, the valve will remain closed and thus function as a solenoid valve.

AKV 10P0 - AKV 10P7 is a direct operated valve which can operate at 0 bar/0 psi differential pressure.

AKV 10PS4 - AKV 10PS7 is a servo piston operated valve which needs a minimum differential pressure of 0.1 bar / 1.45 psi to open the valve and keep it open.

### Flow direction

AKV 10P/10PS is designed for single flow direction and following pictures from A to B refers the normal flow.

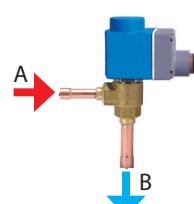


## Data sheet | Electric expansion valve, type AKV 10P, AKV 10PS

### Dimensions and weight AKV 10P valve


#### AKV 10P0 - AKV 10P6

Weight excluding coil: 0.30 kg / 0.66 lbs

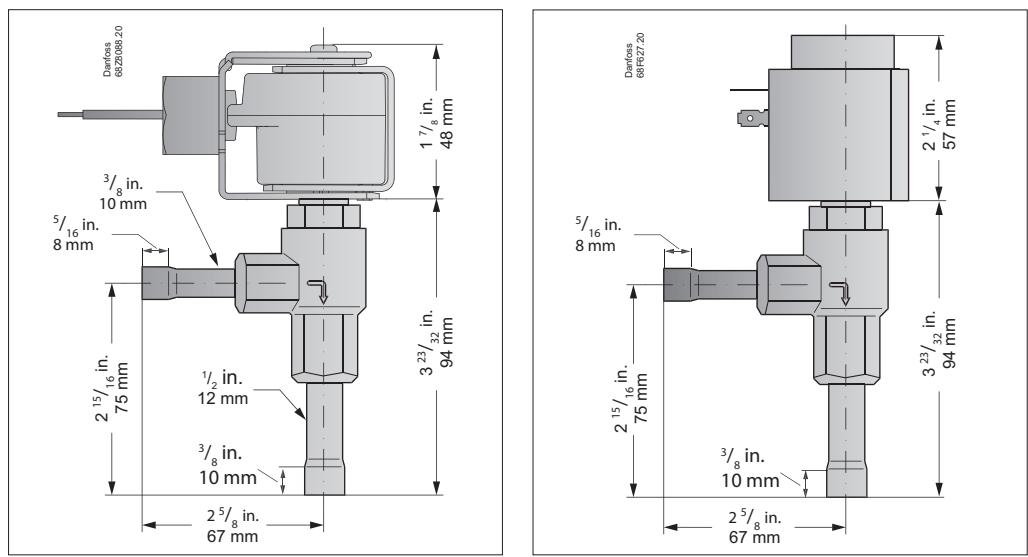

#### AKV 10P7


Weight excluding coil: 0.343 Kg / 0.76 lbs

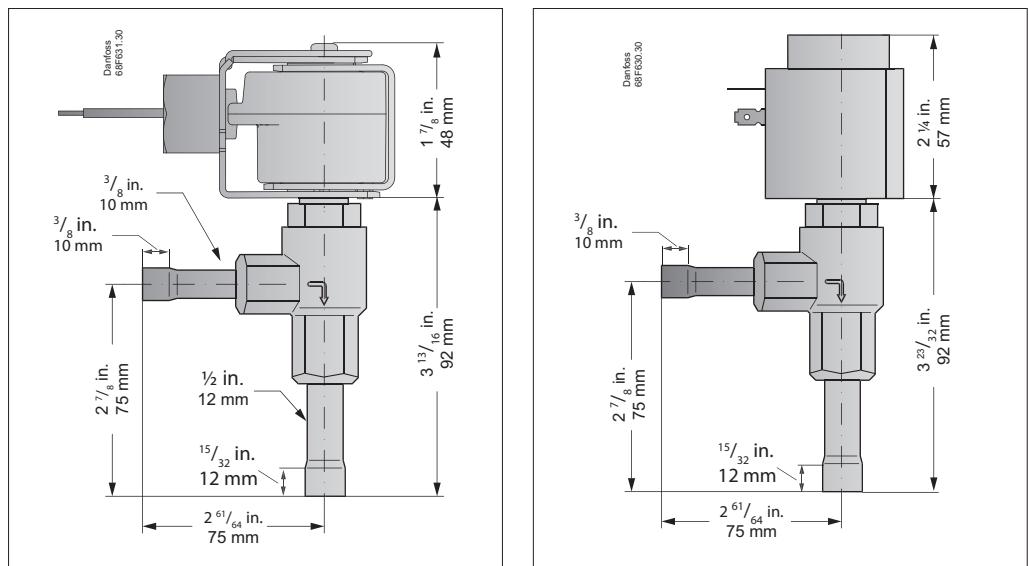

## Data sheet | Electric expansion valve, type AKV 10P, AKV 10PS


### Dimensions and weight AKV 10PS valve

#### AKV 10PS4 – AKV 10PS6

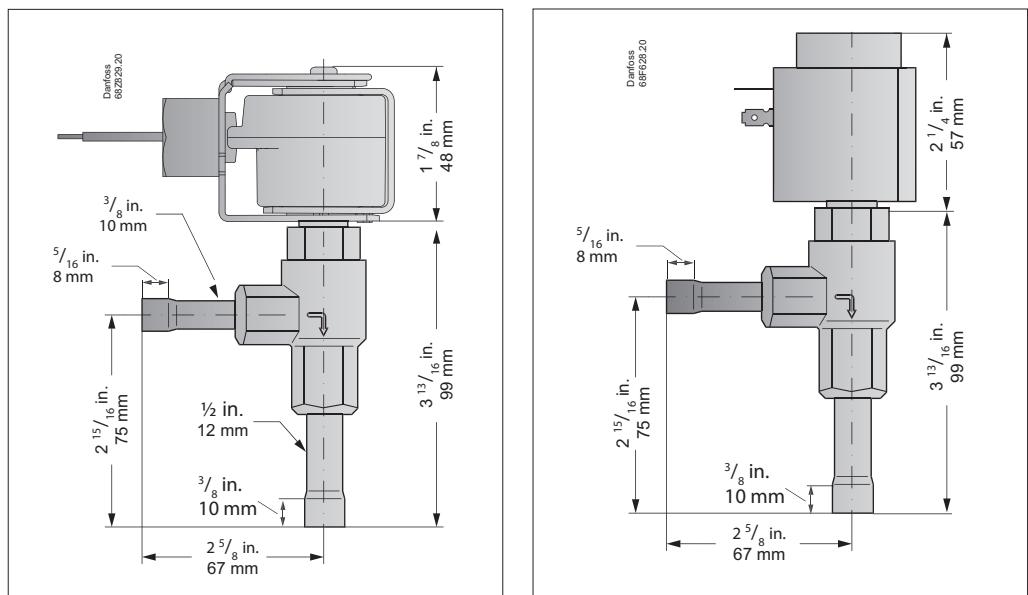

Weight excluding coil: 0.335 Kg / 0.74 lbs


#### AKV 10PS7

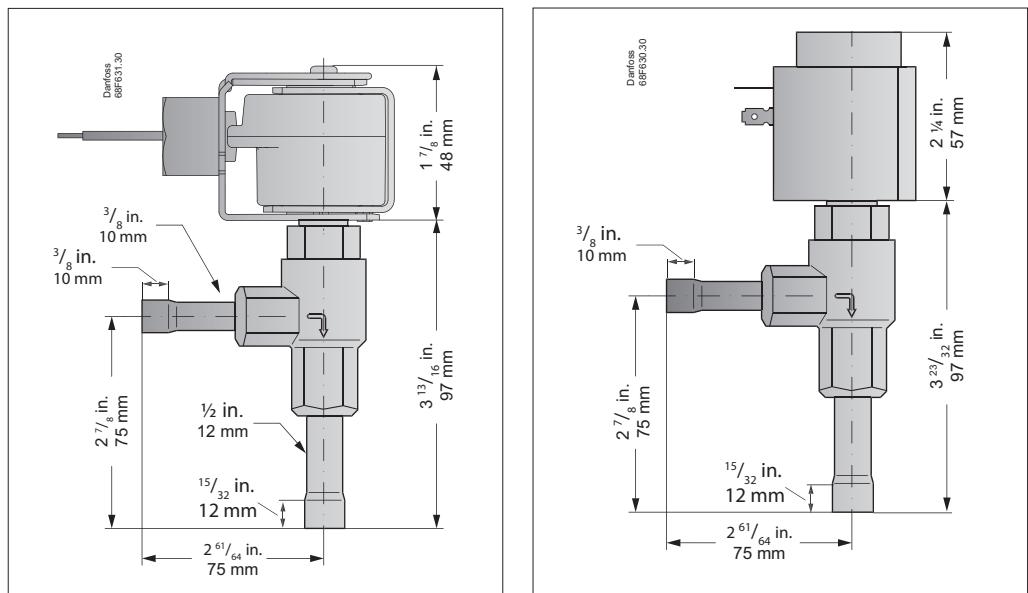


Weight excluding coil: 0.343 Kg / 0.76 lbs

## Data sheet | Electric expansion valve, type AKV 10P, AKV 10PS


### Dimension and weight standard coils

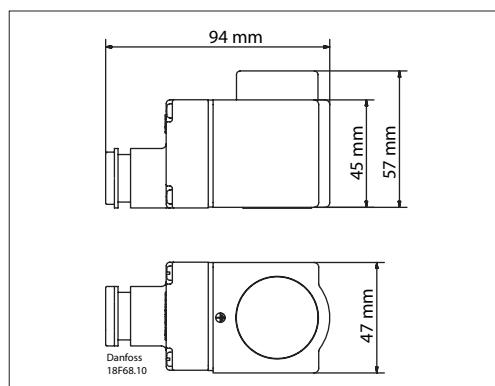


**Terminal box 10 W**  
Weight 0.29 Kg / 0.6 lbs

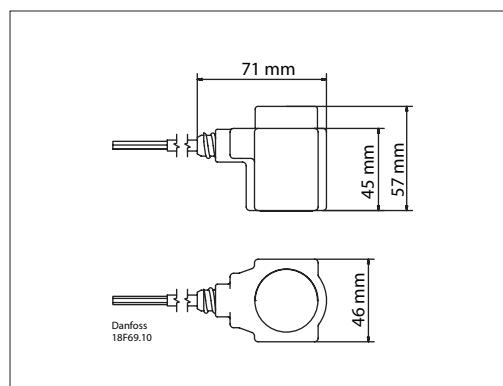

**Cable 10 W**  
Weight 0.29 Kg / 0.6 lbs

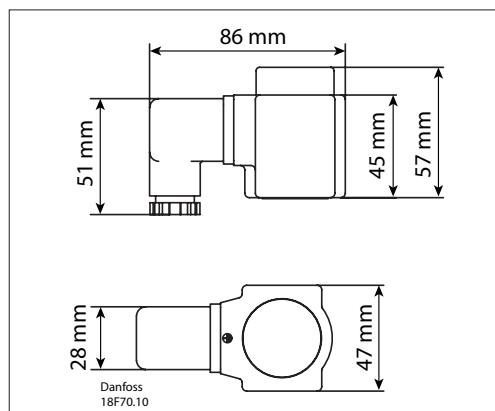


**DIN socket 10 W**  
Weight 0.24 Kg / 0.5 lbs

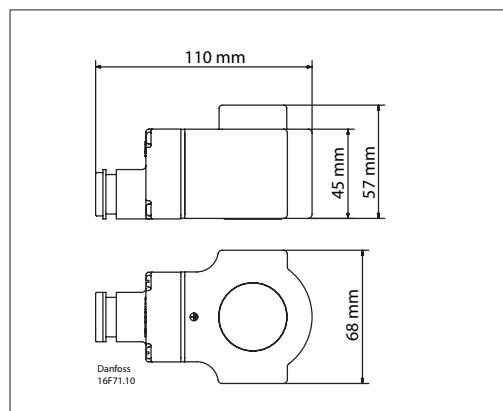


**Terminal box 12 - 20 W**  
Weight 0.55 Kg / 1.2 lbs

### Dimensions and weight UL coils

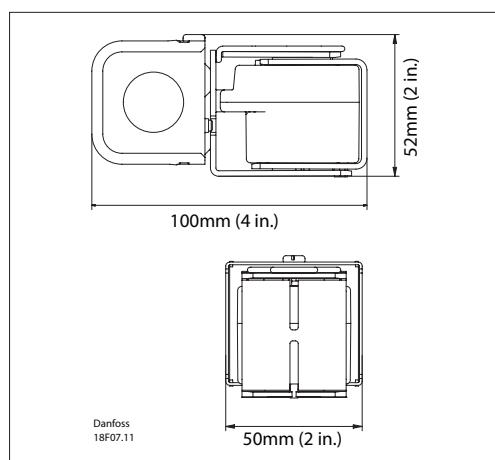

**Junction box**  
Weight 0.860 lbs / 0.39 kg

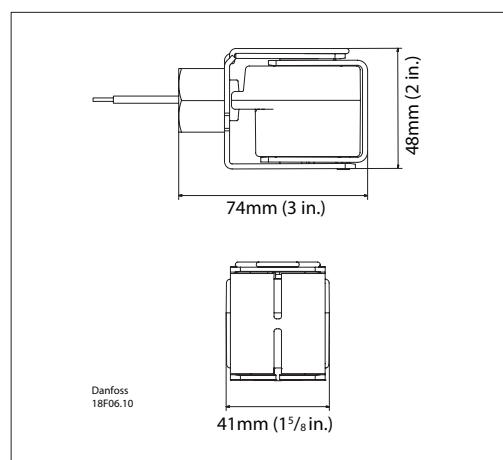

**Conduit boss**  
Weight 0.717 lbs / 0.33 kg

**Troubleshooting**

Symptom	Possible Cause	Remedy
<b>Valve does not open</b>	-Lack of proper electrical connection/Power	•Check the connection between valve and a controller
	-Incorrect voltage/frequency	•Check coil specification against measured operating voltage
	-Differential pressure too high/low	•Check differential pressure of valve against technical specification •Replace with suitable valve and or coil
	-Impurities in the valve	•Check dirt inside valve and clean out impurities
	-Burnt out coil	•Never take the coil off the valve if voltage is applied. The coil can burn out •Check the wiring diagram and wiring itself •Check relay contacts, lead connections and fuses
	-Valve stuck open after being assembled	•Check Instruction if all correct parts are used, and correctly assembled
	-Valve does not open after orifice has been exchanged to a larger capacity due to high differential pressure	•Replace with suitable valve and or coil
<b>Internal leakage/valve does not close or closes partially</b>	-Continuous voltage on coil	•Do not remove powered coil off the valve
	-Impurities in the valve	•Check dirt inside valve and clean out impurities
	-Pulsation in discharge line	•Check pressure and flow conditions
	-Differential pressure too high in open position	•Check the supply voltage in the coil •Replace with suitable valve
<b>Insufficient capacity</b>	-Valve capacity too small	•Check refrigeration system capacity and compare with valve capacity •Replace with larger valve if necessary - larger capacity orifice in AKV 10P - larger capacity piston in AKV 10PS
	-Suction pressure too low -Evaporator superheat too high	•Check superheat performance, the settings SH min and SH max. in the super heat controller •Check valve capacity •Check coil excitation time •Also check section "High Superheat"
	-Valve blocked with foreign material	•Valve strainer blocked, replace strainer with a new one
<b>Evaporator fully or partly iced up</b>	-Valve blocked with foreign material -Also check "Insufficient capacity"	•Replace valve strainer/filter •De-ice evaporator
<b>High superheat</b>	-Lack of sub-cooling	•Check refrigerant •Also check section •Also refer to section Insufficient capacity
	-Controller is not setup/tuned properly	•Check the controller superheat settings and sensors connected to it •Tune PID parameters in the controller
<b>Flash gas</b>	-Lack of sub-cooling ahead of valve	•Check refrigerant for flash gas ahead of valve/external subcooler If the valve is placed much higher than condenser outlet •Check pressure difference
	-Oversized valve selected	•Limit max opening degree of the valve setting in controller •Check refrigeration system capacity and compare with valve capacity •Use proper valve size suitable for the system
<b>Pulsations in liquid line</b>	-High flow velocity, max. 1 m/s	•Check flow velocity, using coolselector2 •Change to AKV 10PS for maximum dampening effect •Use larger diameter pipes to reduce flow velocity
<b>Overheating coil</b>	-Armature is not moving when coil is energized -Too high voltage supply, dirt in valve, too high MOPD)	•Check section valve does not open

**Appendix 1:  
AKV 10P/10PS MOPD with various coils**

Type	B	B	B	B	B	B	B
<b>Voltag</b>	<b>230 A</b>	<b>230 A</b>	<b>230 C</b>	<b>230 A</b>	<b>230 C</b>	<b>220 G</b>	<b>240 B</b>
<b>Watt</b>	<b>12</b>	<b>15</b>	<b>17</b>	<b>19</b>	<b>16</b>	<b>16</b>	<b>15</b>
<b>Code no.</b>	<b>018F6176</b>	<b>018F6801</b>	<b>018F6193</b>	<b>018F6905</b>	<b>018F6813</b>	<b>018F6814</b>	<b>018F6188</b>
<b>MOPD at</b>	<b>50 Hz</b>	<b>50 Hz</b>	<b>50 Hz</b>	<b>50 Hz</b>	<b>60 Hz</b>	<b>60 Hz</b>	<b>60 Hz</b>
<b>MOPD at</b>	<b>220 V</b>	<b>220 V</b>	<b>220 V</b>	<b>230 V</b>	<b>110 V</b>	<b>220 V</b>	<b>240 V</b>
<b>AKV 10P0</b>	25	35	35	N/A	35	35	25
<b>AKV 10P1</b>	25	35	35	N/A	35	35	25
<b>AKV 10P2</b>	25	35	35	N/A	35	35	25
<b>AKV 10P3</b>	25	35	35	N/A	35	35	25
<b>AKV 10P4</b>	N/A	25	25	35	18	25	18
<b>AKV 10P5</b>	18	25	25	35	30	35	25
<b>AKV 10P6</b>	N/A	N/A	25	35	18	18	18
<b>AKV 10P7</b>	N/A	N/A	14	18	14	14	N/A
<b>AKV 10PS4</b>	25	25	35	N/A	35	35	30
<b>AKV 10PS5</b>	25	25	35	N/A	35	35	30
<b>AKV 10PS6</b>	25	25	35	N/A	35	35	30
<b>AKV 10PS7</b>	25	25	35	N/A	35	35	30
Type	BJ / BX		BJ / BX		BJ / BX		
<b>Voltag</b>	<b>24 C</b>		<b>120 CS</b>		<b>240 CS</b>		
<b>Watt</b>	<b>14</b>		<b>16</b>		<b>14</b>	<b>14</b>	<b>17</b>
<b>Code no.</b>	<b>018F4103</b>		<b>018F4113</b>		<b>018F4122</b>		
<b>MOPD at</b>	<b>60 Hz</b>	<b>50 Hz</b>	<b>50 Hz</b>	<b>60 Hz</b>	<b>60 Hz</b>	<b>60 Hz</b>	<b>50 Hz</b>
<b>MOPD at</b>	<b>24 V</b>	<b>24 V</b>	<b>110 V</b>	<b>110 V</b>	<b>120 V</b>	<b>208 V</b>	<b>240 V</b>
<b>AKV 10P0</b>	25	35	35	25	35	18	35
<b>AKV 10P1</b>	25	35	35	25	35	18	35
<b>AKV 10P2</b>	25	35	35	25	35	18	35
<b>AKV 10P3</b>	25	35	35	25	35	18	35
<b>AKV 10P4</b>	18	25	30	18	18	14	25
<b>AKV 10P5</b>	25	35	35	25	35	18	35
<b>AKV 10P6</b>	14	25	25	18	18	14	18
<b>AKV 10P7</b>	N/A	18	18	N/A	14	N/A	14
<b>AKV 10PS4</b>	25	35	35	30	35	25	35
<b>AKV 10PS5</b>	25	35	35	30	35	25	35
<b>AKV 10PS6</b>	25	35	35	30	35	25	35
<b>AKV 10PS7</b>	25	35	35	30	35	25	35

The MOPD values provided in the table above are in bar.

MOPD table is based on:

- Nominal Voltage
- Max media temperature 60 °C (140 °F)
- Max ambient temperature 50 °C (122 °F)

## Appendix 2: Dimensioning of the liquid

### Correctly dimensioned liquid line

To obtain a correct supply of liquid to the AKV 10P/PS valve, the liquid line to the individual AKV 10P/PS valve must be correctly dimensioned.

The liquid flow rate should not exceed 3 ft/s

**CO<sub>2</sub>**

Type	Pipe dimension	
	Refrigeration	Freezing
<b>AKV 10P0</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P1</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P2</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P3</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P4</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P5</b>	3/8 in / 10 mm	1/2 in / 12 mm
<b>AKV 10P6</b>	1/2 in / 12 mm	5/8 in / 15 mm
<b>AKV 10P7</b>	5/8 in / 15 mm	3/4 in / 18 mm

**R407A**

Type	Pipe dimension	
	Refrigeration	Freezing
<b>AKV 10P0</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P1</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P2</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P3</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P4</b>	3/8 in / 10 mm	3/8 in / 10 mm
<b>AKV 10P5</b>	1/2 in / 12 mm	1/2 in / 12 mm
<b>AKV 10P6</b>	1/2 in / 15 mm	1/2 in / 15 mm
<b>AKV 10P7</b>	5/8 in / 16 mm	5/8 in / 16 mm

**Note!**

The conditions are the same as for the rated capacities.

Evaporating temperature is -10 °C for refrigeration and -30 °C for freezing.

The super heat is 8 K for both refrigeration and freezing.

Pipes are according ANSI or DIN-EN.

If conditions deviate from above, the pipe dimensions should be checked.

## Related products

AK-CC 550 case controller	AK-CC 750 case controller	EKC 315A superheat controller	DML/DMSC Eliminator® hermetic filter drier